

3.5 SETUP - READERS

Setup communication ports that are connected with AVEA's readers. Instruct the NET Attendance to perform the tasks after getting the card ID from the readers.

The image shows the 'Net Attendance' software interface. The 'Setup' menu is open, and 'Setup Readers' is selected. Below it, the 'Setup' dialog box is displayed, showing a list of readers. The 'COM4' reader is selected and highlighted. A callout box points to the 'COM4' row in the table, stating 'Double click to enter reader / comm port setup'. Below the table, the 'COM4' configuration dialog box is shown, with various fields and options. A red callout points to the 'Enable' checkbox, stating 'Check the box to enable the RFID reader'. Other callouts point to the 'IP Address', 'Port No.', 'Description', 'Mode', and 'Lock Time' fields, with corresponding instructions: 'Enter IP Address of the reader', 'Enter the Port No. of the reader', 'Name the connection of the reader', 'CLOCK - Time Clock IN - Entrance OUT - Exit', and 'Duration for releasing electric lock (in seconds)'.

Connected	Enabled	IP Address	IP Port	Description	Mode	Lock Time
COM4 [192.168.1.234]	<input type="checkbox"/>	192.168.1.231	1668	COM1	IN	1 SEC
	<input type="checkbox"/>	192.168.1.232	1668	COM2	IN	1 SEC
	<input type="checkbox"/>	192.168.1.233	1668	COM3	IN	1 SEC
	<input checked="" type="checkbox"/>	192.168.1.234	1668	COM4	IN	1 SEC
	<input type="checkbox"/>	192.168.1.235	1668	COM5	IN	1 SEC
	<input type="checkbox"/>	192.168.1.236	1668	COM6	IN	1 SEC
	<input type="checkbox"/>	192.168.1.237	1668	COM7	IN	1 SEC
	<input type="checkbox"/>	192.168.1.238	1668	COM8	IN	1 SEC

COM4 Configuration Dialog:

- Enable
- IP Address: 192.168.1.234
- Port No.: 1668
- Description: COM4
- Mode: IN
- Lock Time: 1

After confirm the setup, please enter the Access Manager to put the settings into the reader in order to make the changed effective.