


3.7 SYSTEM PINS

Access PINS allow users to use a single PIN number to enter the premises. No ID card is needed. Enter "0" if you do not need this feature.

Control PIN is specially designed for protecting the IP reader being accessed by unauthorized users. When access to the IP reader from NET Attendance, the Control PIN must be the same as the one in the IP reader.

Please remember the PIN numbers. If the PIN is forgotten, there is no way to recover it. And you need to reset the card reader.

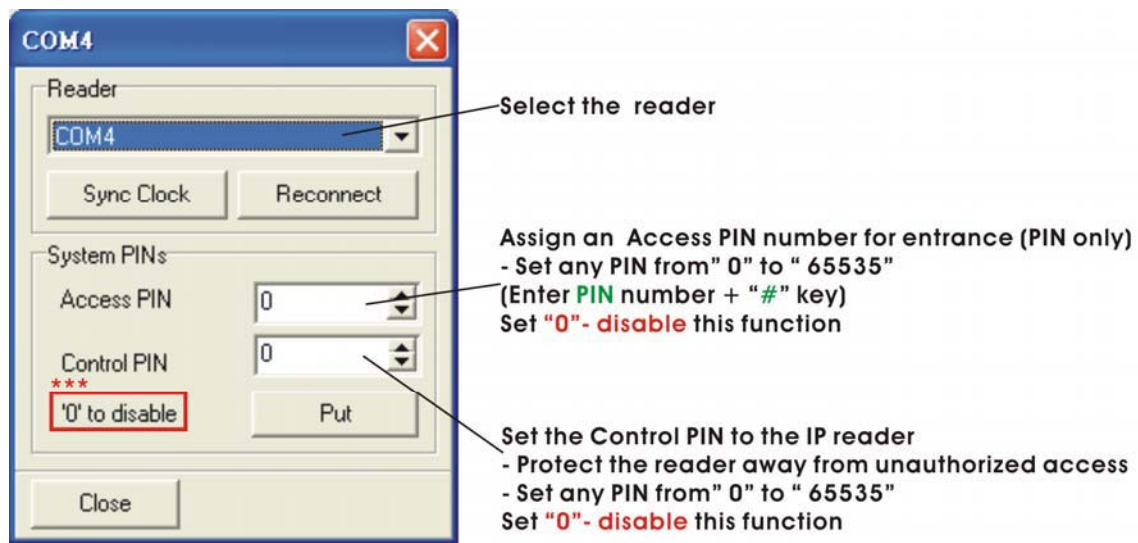

Please remember click on the 'PUT' button after changed in order to make the settings effective.